
1. Carton Markings:


Check carton for labels as shown (date code will appear only on one end)

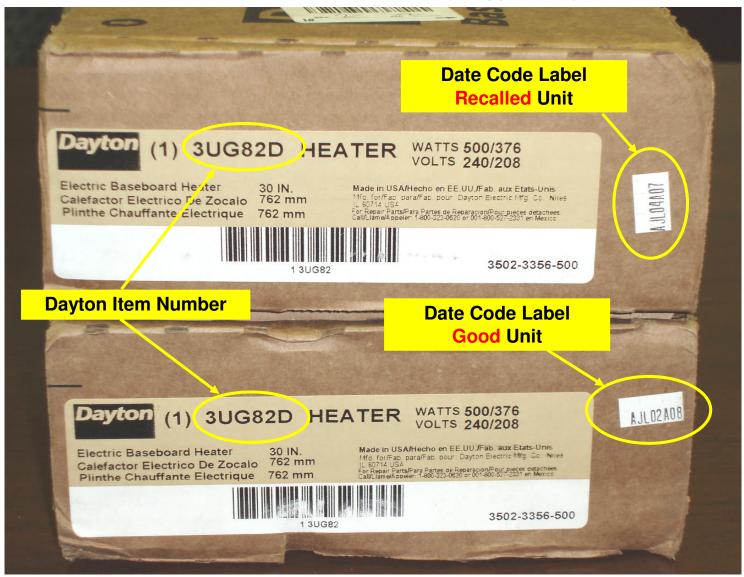

If Model 3UG82D AND Date Code AJL04A07, go to step 2. If not this model and date code, heater is not affected by this recall.

2. Heater Nameplate:

Check nameplate for affected model number (3UG82D)

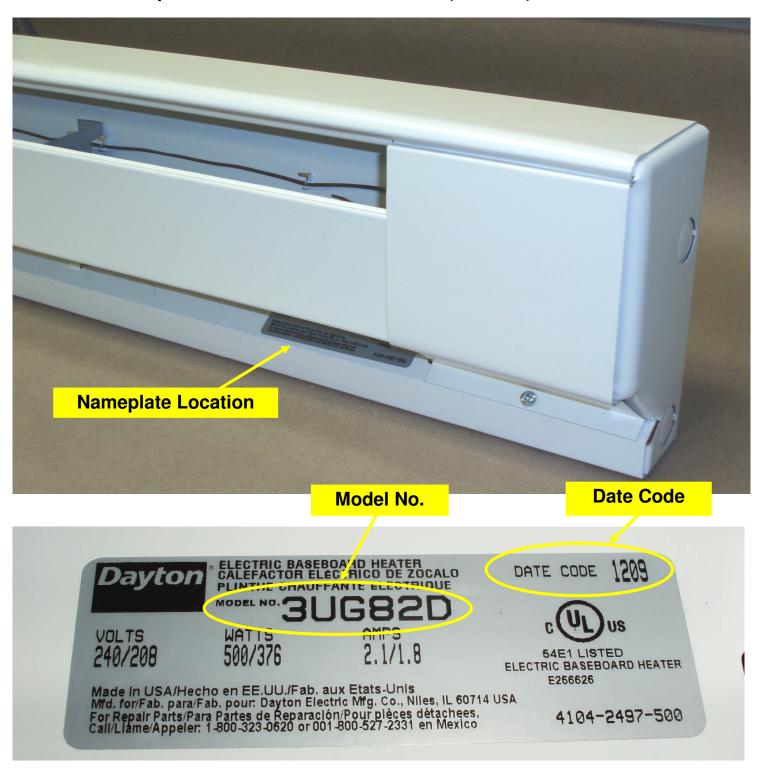

If Model 3UG82D <u>AND</u> Date Code 1209, go to step 3. If not this model or date code, heater is not affected by this recall.


3. Heater Wiring:

a. To inspect heater wiring, first disconnect power to heater by flipping circuit breaker to OFF position.

WARNING: Electric Shock Hazard.


Make sure electric power is turned off at electrical service panel before removing the cover.

b. Using screwdriver, remove screw as shown and remove cover.

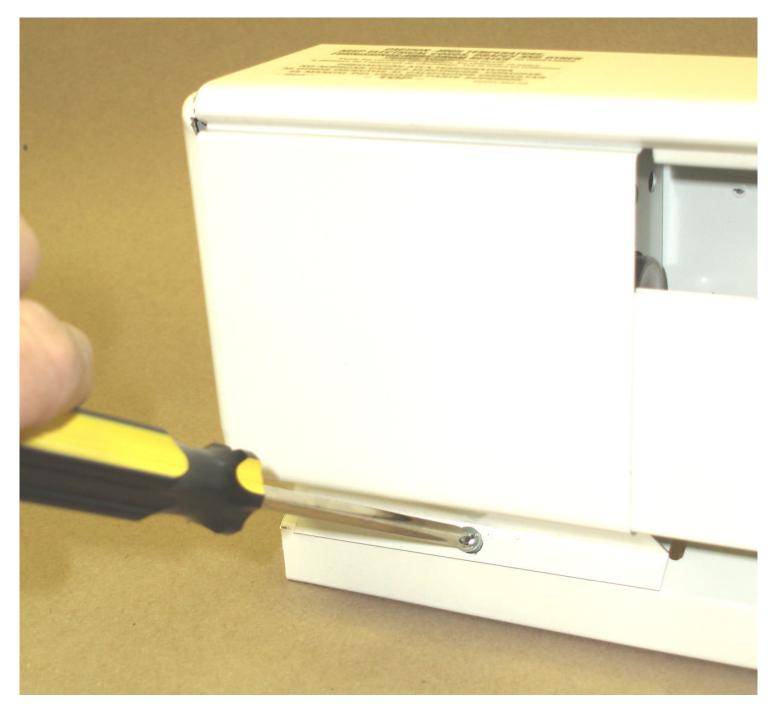

Heater Wiring (Continued):

c. Remove cover by rotating bottom outward as shown.

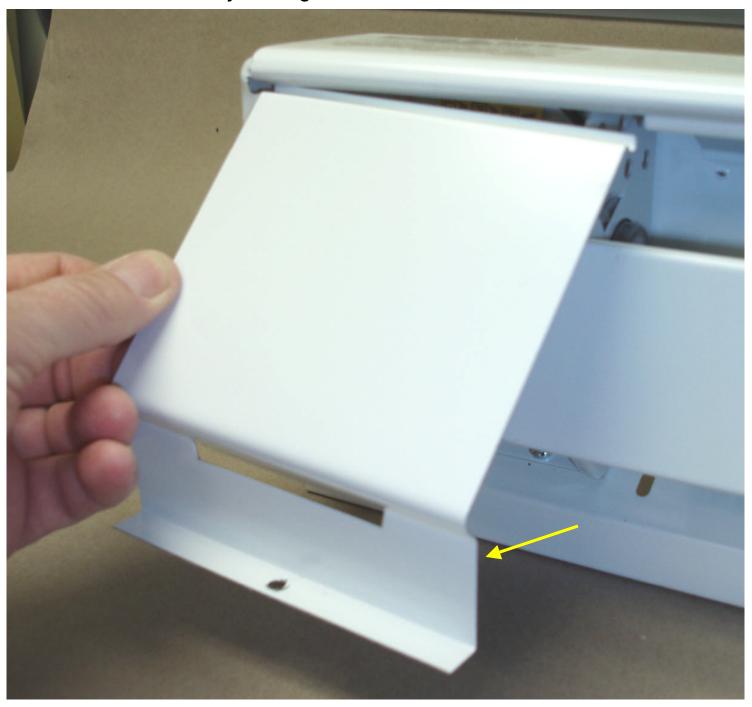

Heater Wiring (Continued):

d. Visually inspect wiring colors and look for yellow warning label as shown. (Note: during installation other wiring may be installed)

